



Wireless Vehicle Monitors

AlertDriver™

USER MANUAL

Limited One Year Warranty

Root Four Imagination Inc. warrants this product to be free from defects in materials and workmanship for a period of one year from the date of sale to the original user or consumer purchaser. Root Four Imagination's exclusive obligation under this warranty shall be, at its option: (a) to supply, without charge, a replacement of the product or (b) to refund the purchase price in respect of any product that is found to be defective and that is returned, with its proof of purchase to the original supplier.

This warranty excludes and does not cover defects, malfunctions, or failures caused by misuse, unauthorized repairs, modifications or accidental damage. This warranty is only applicable to a product purchased through a Root Four Imagination authorized dealer. In no event shall Root Four Imagination be liable for consequential or incidental damages. This warranty is in lieu of all other expressed warranties. The duration of any implied warranty is limited to the period of the expressed warranty set forth above.

www.lemurmonitors.com

Patents Pending



ROOT FOUR IMAGINATION INC.
MOUNT PEARL, NL
Canada A1N 5K5
© Root Four Imagination Inc. 2009

Lemur Vehicle Monitors™ and AlertDriver™
are trademarks of Root Four Imagination Inc.

Customer Service

1.866.302.0054


support@lemurmonitors.com

100808

Getting Started - Installation

BEFORE YOU START: Locate the OBD-II Port but DO NOT plug in AlertDriver yet.

The OBD-II port is located under the dash, usually on the drivers side.

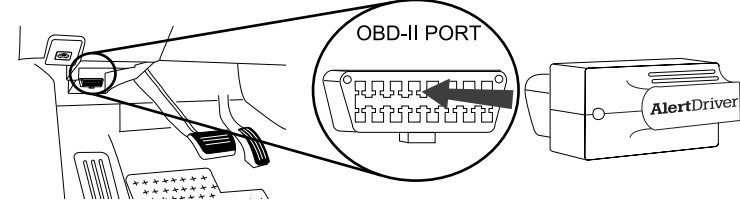

DEFAULT INSTALL: DO NOT START VEHICLE UNTIL INSTALL IS COMPLETE

- Continuous Beeps while vehicle speed exceeds 70 mph (113 km/h)
- 3 Warning Beeps when vehicle speed goes above 35 mph (56 km/h)

1: Plug in AlertDriver and wait for 10 seconds until you hear a long beep.

Success! You are now ready to use AlertDriver.

LEARN MODE INSTALL: Setting custom maximum speed for continuous beeps

- Continuous Beeps at custom speed, not exceeding 70 mph (113 km/h)
- 3 Warning Beeps when vehicle speed goes above 35 mph (56 km/h)

1: START YOUR VEHICLE and plug in AlertDriver.

The Sensor will beep three times to indicate that it is in Learn Mode.

2: Drive your vehicle to the speed you consider safe driving.

The sensor will beep loudly every time it learns a new maximum speed.

3: Park your vehicle and turn it off.

You will hear a long beep to indicate that your settings have been saved.

Success! You are now ready to use AlertDriver.



Tamper Alarm

For the first 24 hours after install, AlertDriver will sound an alarm each time the vehicle is started. This will inform you if AlertDriver has been unplugged in the last 24 hours.